

MC[®] SCHNITZER

-Montageanleitung-

**Achspads vorne
– S1000RR/R –**



Teile-Nr.: S700372-F15

AC Schnitzer – S1000RR/R –

Wichtige Hinweise!

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemässen Einbau entstehen!

Diese Montageanleitung ist ausschliesslich zum Gebrauch durch autorisierte AC Schnitzer bzw. BMW Händler bestimmt. Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen und Werkzeugen. Kenntnisse bezüglich Materialeigenschaften und Normen werden vorausgesetzt!

Die von AC Schnitzer angebotenen Sturzpads stellen einen Schutz des Rahmens und der Anbauteile bei „Umfallern“ oder sogenannten „Rutschern“ dar. Leider sind auch diese Bauteile kein Garant für Unfälle ohne Folgeschäden. So ist es durchaus möglich, dass sich die Sturzpads bei „Rutschern“ an vorstehenden Teilen, wie Curbs, Kanaldeckeln, Randsteinen, etc. einhaken und der einwirkenden Kraft nachgeben.

Daraus resultierende Folgeschäden gehen ausschliesslich zu Lasten des Sturzverursachers und können nicht bei AC Schnitzer geltend gemacht werden. -Bitte informieren Sie Ihre Kunden über diesen Sachverhalt!!

Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

Lackieren

- entfällt!

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt ca. **1 AW**, die ja nach Zustand und Ausstattung des Fahrzeugs abweichen kann.


Lackierzeit (1 AW = 5 Minuten)

- entfällt.

Erforderliches Werkzeug

- 13mm Steckschlüssel

AC Schnitzer - S1000RR/R -

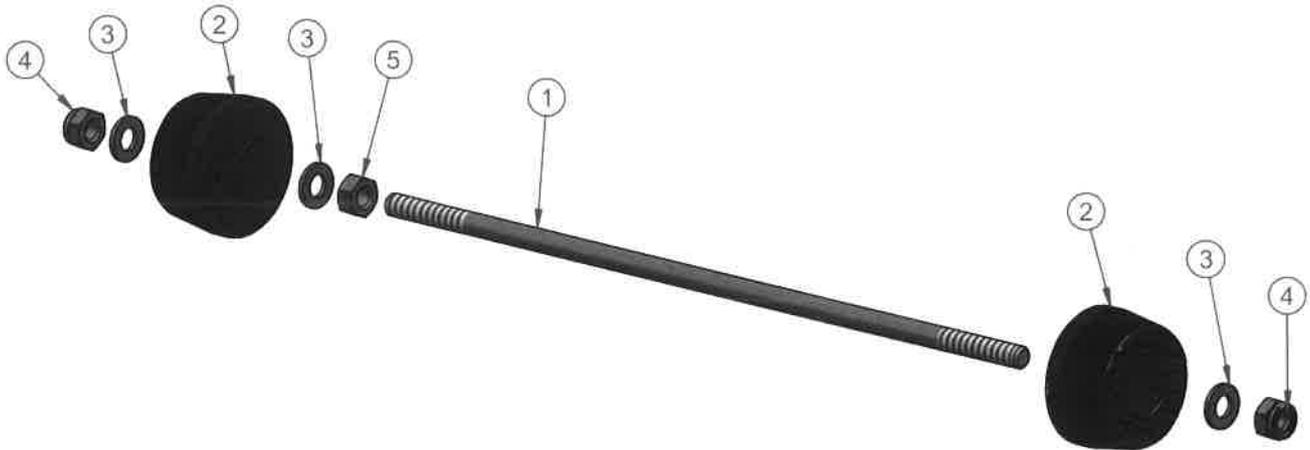

Pos.	Titel	Anzahl
1	Achse Sturzpads VA BM1S	1
2	Achspad V BM1S	2
3	Scheibe DIN 125 - A 8,4	3
4	Sechskantmutter DIN 985-M8	2
5	Sechskantmutter DIN 934 - M8	1

AC Schnitzer – S1000RR/R –

Das Fahrzeug mit einem Motorradständer sicher abstellen.



Die Auflageflächen der Pads am Standrohr und der Achse links und rechts reinigen.



Das vormontierte Pad mit Stange von links durch die Achse schieben.



Von der rechten Seite das Pad mit der Unterlegscheibe und Mutter montieren.

Drehmoment: 10 Nm



ATC[®] SCHNITZER

- Assembly instructions -

Front axle pads – S1000RR/R –



Part number.: S700372-F15

General information!



AC Schnitzer – S1000RR/R –

Important notes!

These installation instructions must be read before starting the installation work. AC Schnitzer accepts no liability for damage caused by incorrect installation!

These assembly instructions are intended exclusively for use by authorised AC Schnitzer or BMW dealers. The target group for these assembly instructions is in all cases qualified personnel trained on BMW vehicles with appropriate specialist knowledge and tools. Knowledge of material properties and standards is required!

The crash pads offered by AC Schnitzer protect the frame and attachments in the event of "falls" or so-called "slips". Unfortunately, these components are also no guarantee for accidents without consequential damage. It is therefore quite possible that the crash pads hook onto protruding parts such as curbs, manhole covers, curbstones, etc. and give way to the force applied.

Any consequential damage resulting from this shall be borne exclusively by the person who caused the fall and cannot be claimed from AC Schnitzer. -Please inform your customers about this!

Assembly

All work must be carried out in accordance with the applicable safety regulations (e.g. safety goggles).

Painting

- not applicable!

Installation time (1 AW = 5 minutes)

The installation time is approx. 1 AW, which may vary depending on the condition and equipment of the vehicle.

Coating time (1 AW = 5 minutes)

- not applicable.


Required tools

- 13mm socket spanner

Assembly instruction no.: S700372-F15 / Stand: 28.07.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

AC Schnitzer - S1000RR/R -

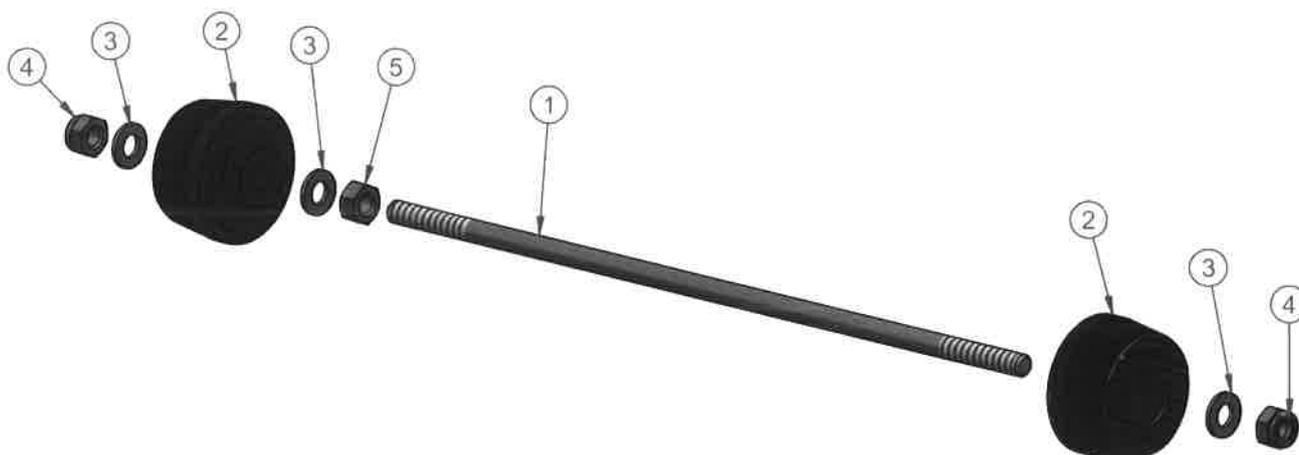

Pos.	Titel	Anzahl
1	Achse Sturz pads VA BM1S	1
2	Achspad V BM1S	2
3	Scheibe DIN 125 - A 8,4	3
4	Sechskantmutter DIN 985-M8	2
5	Sechskantmutter DIN 934 - M8	1

Assembly instructions



AC Schnitzer – S1000RR/R –

Park the vehicle safely with a motorbike stand.



The contact surfaces of the pads on the standpipe and
Clean left and right axle.



The pre-assembled pad with rod from the left through
push the axle.



From the right side the pad with the washer and
Mount the nut.
Torque: 10 Nm



Assembly instruction no.: S700372-F15 / Stand: 28.07.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135