

AC SCHNITZER

-Montageanleitung-

Lenkerendenspiegel

S1000R 2014-2021 / F900R

R1200R / R1250R



S106575-F15-F15 mit S700817

AC Schnitzer Lenkerendenspiegel

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten komplett zu lesen und hat keinen Anspruch auf Vollständigkeit hinsichtlich jeden Arbeitsschrittes. AC Schnitzer übernimmt keine Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Ware vor Beginn der Arbeiten auf Vollständigkeit und Unversehrtheit prüfen. Spätere Reklamationen können nicht berücksichtigt werden.

Zielgruppe dieser Montageanleitung ist an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen und Werkzeugen. Kenntnisse bezüglich Materialeigenschaften, Drehmomenten und Normen werden vorausgesetzt ! Arbeiten an Bremssystemen und der elektrischen Anlage sollten nur von fachkundigen Personen durchgeführt werden !

Vor der Montage:

Zur Montage ist das Fahrzeug in ausreichender Weise gegen Wegrollen oder Umstürzen zu sichern. Hierzu empfiehlt sich die Verwendung des serienmäßigen Hauptständers oder eines original BMW Montageständers. Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen.

Nach der Montage:

Nach Abschluß der Arbeiten ist ggf. eine Probefahrt durchzuführen ! Nach beendeter Probefahrt sind alle Schraubverbindungen auf festen Sitz und alle beweglichen Teile auf ausreichenden Freigang zu prüfen.

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **6 AW**.

Erforderliches Werkzeug

- Standard Torx & Inbus Werkzeug

AC Schnitzer Lenkerendenspiegel



A AC Schnitzer Spiegel mit Distanzring

B AC Schnitzer Vitro Aufkleber schwarz

C AC Schnitzer Montagesatz **S700817** für AC Schnitzer Lenkerendenspiegel

AC Schnitzer Lenkerendenspiegel

Montage

Abb. 1

Serienspiegel demontieren und mitgelieferte Abdeckkappe für den Serienspiegel, in die Gewindebohrung eindrücken.



Abb. 2

Serienschraube am Lenkerende lösen und Lenkerende abnehmen. *Wird nicht wiederverwendet.*



Abb. 3 & 4

AC Schnitzer Spiegelarm am Spiegelgehäuse montieren. Distanzhülse im Spiegelarmauge einlegen und mit der AC Schnitzer Lenkerendbefestigung, nach Abbildung, zusammenfügen.



AC Schnitzer Lenkerendenspiegel

Montage ...

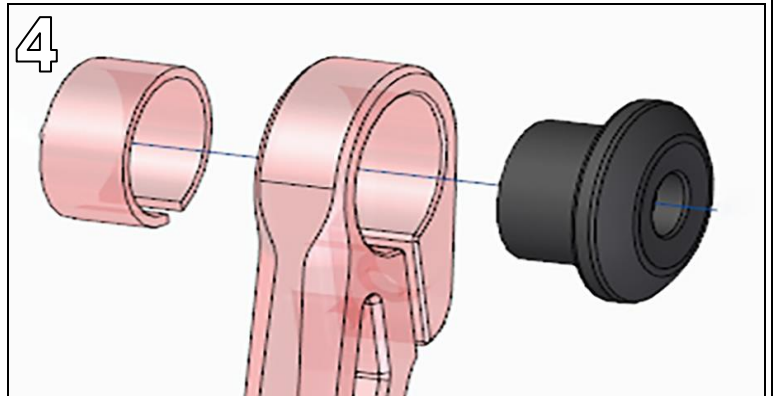


Abb. 5

AC Schnitzer Spiegel Lenkerendbefestigung, in gewünschter Position – ggf. ist der AC Schnitzer Spiegelarm zu drehen, in das Lenkerende mittels der Serienbefestigungsschraube festschrauben.



Abb. 6

Befestigungsschraube des AC Schnitzer Spiegels festziehen, bis Klemmung erreicht ist.



AC Schnitzer Lenkerendenspiegel

Montage ...

Abb. 7

Mitgelieferter AC Schnitzer Vitro Aufkleber in die vorgesehene Vertiefung des AC Schnitzer Spiegelgehäuses einkleben.



Irrtum, Änderung sowie technische Weiterentwicklung
vorbehalten !

AC SCHNITZER

-Fitting Instructions-

Handlebar end mirror

S1000R 2014-2021 / F900R

R1200R / R1250R



S106575-F15-F15 mit S700817

General Notes!



AC Schnitzer handlebar end mirror

Important notes !

These fitting Instructions must be read in full before starting the installation work and do not claim to be of completeness with regard to each work step. AC Schnitzer accepts no liability for damage caused by caused by improper installation !

Check that the goods are complete and undamaged before starting work. Later complaints cannot be considered.

The target group for these fitting instructions is specialist personnel trained on BMW vehicles with the appropriate specialist knowledge and tools. Knowledge of material properties, torques and standards are assumed !
Work on brake systems and the electrical system should only be carried out by qualified persons !

Before fitting:

Before mounting, the vehicle must be adequately secured against rolling away or tipping over. We recommend using the standard main stand or an original BMW assembly stand for this purpose. All work must be carried out in accordance with the applicable safety regulations.

After fitting:

After completing the work, carry out a test drive if necessary ! After completing the test drive, all screw connections must be checked for tightness and all moving parts must be checked for sufficient clearance.

Fitting time (1 unit = 5 minutes)

The fitting time is **6 unit**.

Required tools

- Standard Torx & Allen tool

Components supplied



AC Schnitzer handlebar end mirror



A AC Schnitzer mirror with spacer ring

B AC Schnitzer Vitro sticker black

C AC Schnitzer fitting set **S700817** for AC Schnitzer handlebar end mirror

Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer handlebar end mirror

Fitting...

Fig. 1

Remove the standard mirror and press the supplied cover cap for the standard mirror into the threaded hole



Fig. 2

Undo the standard screw on the handlebar end and remove the handlebar end.
Will not be reused.



Fig. 3 & 4

Fit AC Schnitzer mirror arm to mirror housing. Insert spacer sleeve in mirror arm eyelet and join with AC Schnitzer handlebar end fixing as shown.



AC Schnitzer handlebar end mirror

Fitting ...

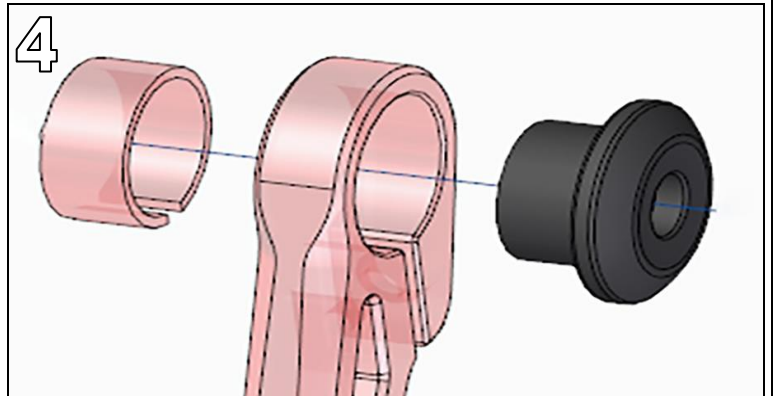


Fig. 5

AC Schnitzer mirror handlebar end mounting, in desired position - if necessary, turn the AC Schnitzer mirror arm, screw into the handlebar end using the standard fixing bolt.



Fig. 6

Tighten the fixing bolt of the AC Schnitzer mirror until clamping is achieved.



AC Schnitzer handlebar end mirror

Fitting ...

Fig. 7

Stick the supplied AC Schnitzer Vitro sticker into the recess provided in the AC Schnitzer mirror housing.



Subject to errors, changes and technical developments
reserved !